

I : Inspection *I : Audible check L : Lubrication R : Replace or change

Items	Months	Service Intervals (Odometer reading or months, whichever occurs first)															
		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
		Odometer Reading		15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS INSIDE THE VEHICLE																	
Check brake pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace air purifier filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	R : More frequently														
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
OPERATIONS OUTSIDE THE VEHICLE																	
Check wheel alignment			I		I		I		I		I		I		I		
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check front and rear wheel bearings for play					I						I				I		
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe usage	I : Every 7,500km or every 6 months														
Check brake shoe linings and drums (drum in disc) for wear		Normal usage		I		I		I		I		I		I		I	
		Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I		
OPERATIONS AFTER ENGINE IS WARMED UP																	
Check automatic transmission for fluid leakage (In case of leakage, check fluid level) Change automatic transmission fluid		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe usage	R : Every 195,000km														
Change engine oil (Refer owners manual for oil type)		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	R : Every 7,500km														
Replace engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	R : Every 7,500km														
Check engine idle speed		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check exhaust gas recirculation (EGR) system		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
OTHERS																	
Check body condition for damage		I : Every year															
Check the common rail engine (small injection quantity learning)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

NOTE:

*1 : If excessive valve noise is evident, check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or rental car.
- (8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.